 




## Installation Instruction for ULTRA THIN MAGNETIC TRACK

 




B


Put the expansion pipe in the drilled

hole



 
Remark:If the reserved wire can not be in the beginning of the track,it can also be conduct under the iron bracket to the junction box.






 Drill proper holes on the ceiling in the size which is according to the expansion pipe. In addition, the position of the holes should according to the holes on iron bracket, and the first track should be in line with the junction box.





Fix the iron bracket on the ceiling by twisting the self-tapping screws through the holes of the bracket into the expansion pipes.

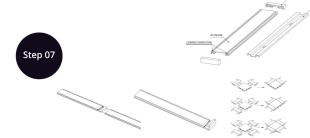


In order to make long version or different shapes of tracks, insert the pin of the connectors in the hole under the copper conductor. Straight connect, 'in' corner and 'L'T'&'+'shape corners are all available in the same way, .



Fix the end cap into the last track .



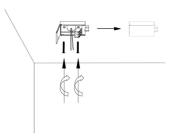


Open the junction box and pull the wire out through the big hole of the junction box then fix the junction box on the ceiling by twisting the self-tapping screws through the holes of the box into the expansion pipes.Later connect the wire to the terminal and close the box.

Remark:1.While connecting, please ensure the electricity of the wire is off. 2.The yellow one in the middle of the terminal is for earth, another two for N&L.

 
3.The junction box is in the beginning and will be in same line with the first track






Put the expansion pipe in the drilled holes.



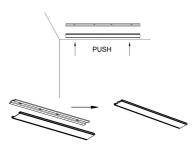

Fix the pc track on the iron bracket by pushing.



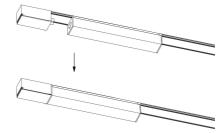

Put the power supply on the track and connect to the junction box,make sure it's connected well.






Check and confirm if all the connections of the tracks are proper, finally give the electricity and then install the lights.







## WIFI Remote Control and Manual

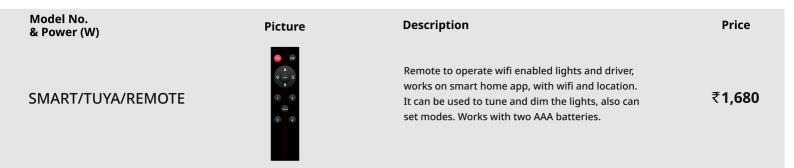






## TUYASMART APP.CONTROL:

TuyaSmart App enables thr lamps to be controlled remotely through the net work.After registering and logging,you can manage the lamps at any time

- 1 Download and open the TuyaSmart app,open the bluetooth of the mobile phone,and connect to the Wifi of the zone.
- 2 Only if the lamp flashes when power on is the matching state
   3 Reset: Power on and off the powersupply 8 times till the lamps flashes (note: after power off it need wait unless 2 seconds each time to empty the electricity)



## MANUAL FOR TUYA WIFI REMOTE CONTROL:

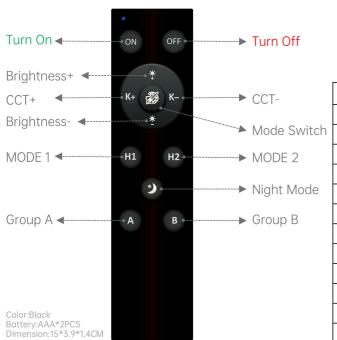

- Pair: In 3-10 seconds after Turn on, hold the ON button (A or B) till the lamp flashes, then matches successfully
- ② Group Reset:Hold the A or B button and Brightness decrease button together for 5 seconds,unpair group A or B
- 3 Whole Reset:Hold the ON button and Brightness decrease button together for 5 seconds;unpair all the lights

		Button Option
	ON	Turn On (all the lights connected)
h	OFF	Turn Off (all the lights connected)
	<b>2</b>	Scene Mode (Mode Switch)
	*	Brightness Increase ▲
	*	Brightness Decrease ▼
	K+	CCT Increase ▲
	K-	CCT Decrease ▼
	H1	MODE1 (Hold to save the current scene, press to turn on the saved scene)
	H2	MODE2 (Hold to save the current scene, press to turn on the saved scene)
	9	Night Mode (3000K Brightness Low)
	А	Group A (Hold to pair,short press to turn on or off)
	В	Group B (Hold to pair,short press to turn on or off)